

Instruction Sheet for GU51261 3-way manual Scart Switcher

MANUAL A/V SWITCHING

FUNCTION

Manually allows you to switch up to three SCART input sources by using A,B,C push buttons on the back of the unit and provides audio/video output through Phono (RCA) jacks and MONITOR SCART jack.

USE

1. Connect VCR, DVD and Satellite receiver to VCR1, VCR2, and VCR3 respectively using a SCART to SCART cable
2. Connect a composite audio/video cable phono plugs or a composite SCART cable to 'INTERFACE OUTPUT PHONO' jacks and connect other end to TV with composite audio/video phono jacks or connect SCART to SCART cable between MONITOR jack and TV
3. Press the desired input source push button on the back of the unit. For example, to select a source connected to 'VCR1' SCART jack, press the button switch labelled 'A' on back of the unit

VCR TO VCR RECORDING

FUNCTION

Allows you to record from one VCR to another VCR

USE

1. Connect a source VCR to SCART input VCR3 or SCART input VCR2 using a SCART to SCART cable.
2. Connect a recording VCR to SCART input VCR1 using a SCART to SCART cable
3. Press the push button B-A or C-A on the back of the unit. For example, if your source VCR is connected SCART input VCR2 then you need to press the B-A push button
4. Record a VHS tape by playing a source VCR connected to the SCART input VCR2 and by recording VCR connected to the SCART input VCR1.

RGB / MONITOR

FUNCTION

Allows you to make RGB connection with your TV using the SCART MONITOR jack, and provides a composite audio / video output when a source is connected to SCART Monitor jack

USE

1. Connect a 21-pin fully wired SCART to SCART cable between the source and SCART input jack VCR3
2. Connect a 21-pin fully wired SCART to SCART output MONITOR jack and TV
3. Press RGB ON / OFF switch to ON on the back of the unit
4. Enable RGB input on your TV.

If your TV does not have SCART input jack but has composite (phono) input jack then connect a source with SCART output to MONITOR jack. Next, connect composite audio / video cable between composite jack next to the MONITOR jack and TV.